

Care & Maintenance

Periodic maintenance is necessary to ensure long term durability and customer satisfaction.

Buyers must therefore advise end user of the following:

To prevent personal injury, furniture must be inspected regularly for loose screws, glides and casters, cracked or broken welds, cracked laminate, wood splinters and general instability. Furniture that is damaged or appears to be unstable must be immediately removed from service and replaced or repaired using only factory authorized parts and methods. Contact customer service for assistance and further instructions.

Wood To clean, use liquid cleaner-wax polish combination. Do not use abrasive household cleaners. Water spills on the surface should be wiped off immediately.

Laminate To remove stains, wipe the surface with a damp cloth using soap or liquid detergent. Remove stubborn stains with a damp paste of baking soda. Leave on for a minute, and then blot away. Abrasive cleaners should not be used. Acid based products spilled on the surface should be wiped off immediately, and then rinsed.

Vinyl Edge and Dur-A-Edge® Use a liquid detergent suitable for cleaning vinyl. After cleaning, wipe the surface with a cloth dampened with warm water.

Vinyl Upholstery For light soiling, use a solution of 10% household liquid dish soap with warm water applied with a soft damp cloth. If necessary, use a solution of 10% household liquid dish soap with warm water applied with a soft bristle brush. Wipe away the residue with a water-dampened cloth.

Painted Metal Wipe with a damp cloth. For stubborn stains and grease, use a mild dish soap and water.

Composite/Fiberglass Remove ordinary dirt and smudges with a mild dish soap and warm water solution. Rinse with a water dampened cloth. Dry with a clean soft cloth or towel. Heavy soiling can be removed with the following non-abrasive household cleaners and soft cloth;

Formula 409® All-Purpose Spray Cleaner

Fantastik® Spray Cleaner

Other similar household cleaners

Rinse cleaned area with water dampened cloth. Dry with a clean soft cloth or towel.

Shell Seats Clean with warm water and household detergent. Use non-abrasive household cleaners.